

# WARBEAST

## USER'S GUIDE



# WARBEAST

## GUITAR ASSEMBLY

### Attaching/removing the Guitar Neck:

1. Slide and hold the lock lever to the unlock position. (see figure #1)
2. Slide the guitar neck into the main body. Return the lock lever to the lock position.
3. Reverse the method to remove the guitar neck.



FIGURE #1

### Attaching/removing the Headstock:

1. Slide and hold the lock lever to the unlock position. (see figure #2 and #3)
2. Slide the headstock on to the guitar's neck. Return the lock lever to the lock position.
3. Reverse the method to remove the head stock.



FIGURE #2

### Removing the Face Plate:

1. The Face Plate **can only be removed** when the guitar neck is disconnected.
2. Slide and hold the Face Plate lock lever to the unlock position. (see figure #4)
3. Carefully and slowly pull the Face Plate off of the guitar starting at the neck slot.
4. Additional Face Plates will be available at [www.dreamGEAR.net](http://www.dreamGEAR.net).




FIGURE #3



FIGURE #4

# WARBEAST

## GUITAR LAYOUT

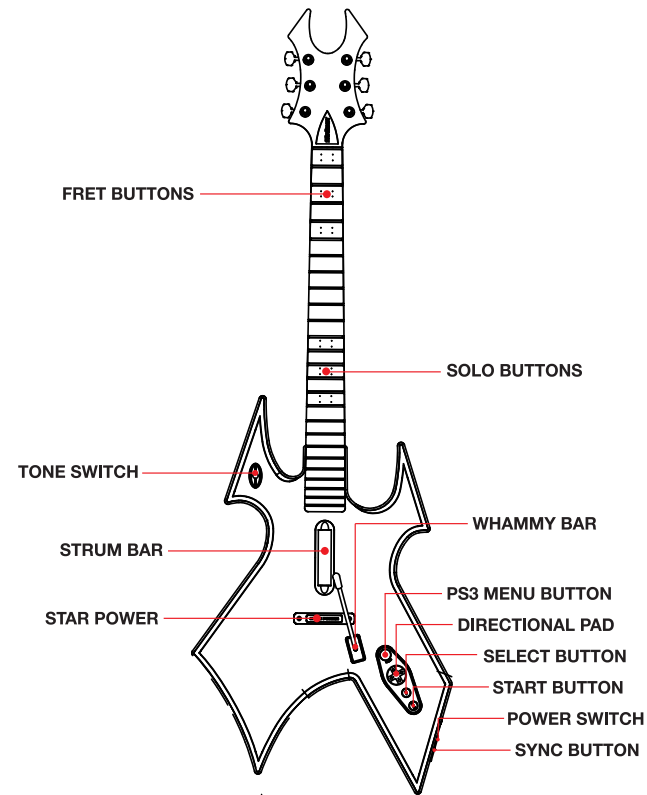

## PLAYSTATION 3 INSTRUCTIONS:

1. Remove the battery lid from the back of the WarBeast. Insert 4 "AA" batteries and replace the battery lid.
2. Connect the USB cable located on the bottom of the receiver to an open USB port on the PlayStation 3. You can also connect the receiver to a PlayStation 3 USB hub.
3. Switch the WarBeast power button to GH (Guitar Hero) or RB/RR (Rock Band/Rock Revolution) depending on the game you will be playing.
4. Press the Connect button on the receiver (LED will flash RED) and the Sync button on the WarBeast. When connected, the LED on the receiver will remain illuminated. After the first Sync you can connect by pressing the Connect button and DG (PS3 menu) button.

### NOTES:

- The **tone switch** is used only when playing Rock Band.
- The **solo buttons** are used mainly for playing solos in Rock Band. The solo buttons can also be used in Guitar Hero. When playing Guitar Hero, the solo buttons are used without the strum bar.
- The DG (PS3 menu) button can access the PS3 menu at anytime during game play.
- If the DG (PS3 menu) buttons flashes while connected, your battery level is low.
- For additional button and control features, refer to your software user's guide.
- The WarBeast has a battery save feature. The WarBeast will go into sleep mode after 3-5 minutes without use. Press the DG (PS3 menu) button to awaken the WarBeast.
- Always power the WarBeast "OFF" when not in use.

**FOR TECHNICAL SUPPORT PLEASE CONTACT:**  
**1-877-999-DREAM or support@dreamgear.net**

## PLAYSTATION 2 INSTRUCTIONS:

1. Remove the battery lid from the back of the WarBeast. Insert 4 "AA" batteries and replace the battery lid.
2. When playing Rock Band, Guitar Hero World Tour, or Rock Revolution, connect the USB cable located on the bottom of the receiver to an open USB port on the PlayStation 2. You can also connect the receiver to a PlayStation 2 USB hub. When playing Guitar Hero 1, 2, or 3, connect the receiver using the standard PlayStation 2 plug.
3. Switch the WarBeast power button to GH (Guitar Hero) or RB/RR (Rock Band/Rock Revolution) depending on the game you will be playing.
4. Press the Connect button on the receiver (LED will flash RED) and the Sync button on the WarBeast. When connected, the LED on the receiver will remain illuminated. After the first Sync you can connect by pressing the Connect button and DG (PS3 menu) button.

### NOTES:

- The **tone switch** is used only when playing Rock Band.
- The **solo buttons** are used mainly for playing solos in Rock Band. The solo buttons can also be used in Guitar Hero. When playing Guitar Hero the solo buttons are used without the strum bar.
- If the DG (PS3 menu) buttons flashes while connected, your battery level is low.
- The DG (PS3 menu) button is only used for connecting.
- For additional button and control features, refer to your software user's guide.
- The WarBeast has a battery save feature. The WarBeast will go into sleep mode after 3-5 minutes without use. Press the DG (PS3 menu) button to awaken the WarBeast.
- Always power the WarBeast "OFF" when not in use.

**FOR TECHNICAL SUPPORT PLEASE CONTACT:**  
**1-877-999-DREAM or support@dreamgear.net**

**iSound**

***dreamGEAR***

## WARRANTY CARD

You have purchased a quality product that has been subjected to a thorough series of tests to ensure the highest level of dependability and compatibility. It is unlikely that you will experience any problem but if a defect should become apparent during the use of this product, dreamGEAR warrants to the original consumer purchaser that this product will be free from defects in material and workmanship for a period of 120 days from the date of your original purchase. If a defect covered by this warranty occurs dreamGEAR, at its option, will repair or replace the product purchased at no charge.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to products used for any industrial, professional or commercial purposes.

To obtain warranty service send the defective product postage prepaid, along with a copy of the original sales receipt showing purchase date to:

### Attention: Returns Department

dreamGEAR, LLC

P.O. Box 478

Torrance, CA 90508

For further information please call our Customer Hotline at 877-999-DREAM (International customers please call 310-222-1045), or visit our websites [www.isound.net](http://www.isound.net) or [www.dreamgear.net](http://www.dreamgear.net). Please allow 4 to 6 weeks for processing.

### FOR TECHNICAL SUPPORT PLEASE CONTACT:

**1-877-999-DREAM or support@dreamgear.net**